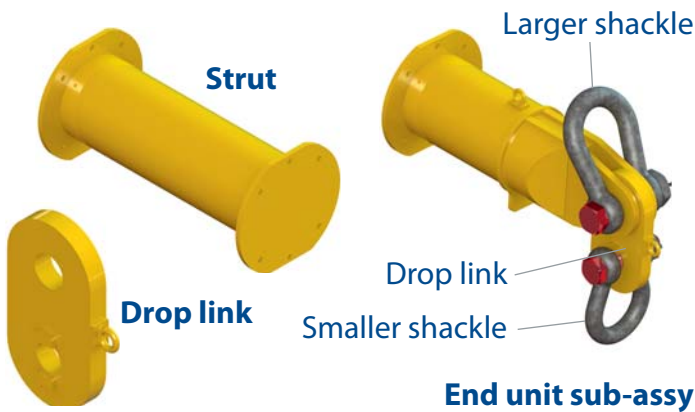
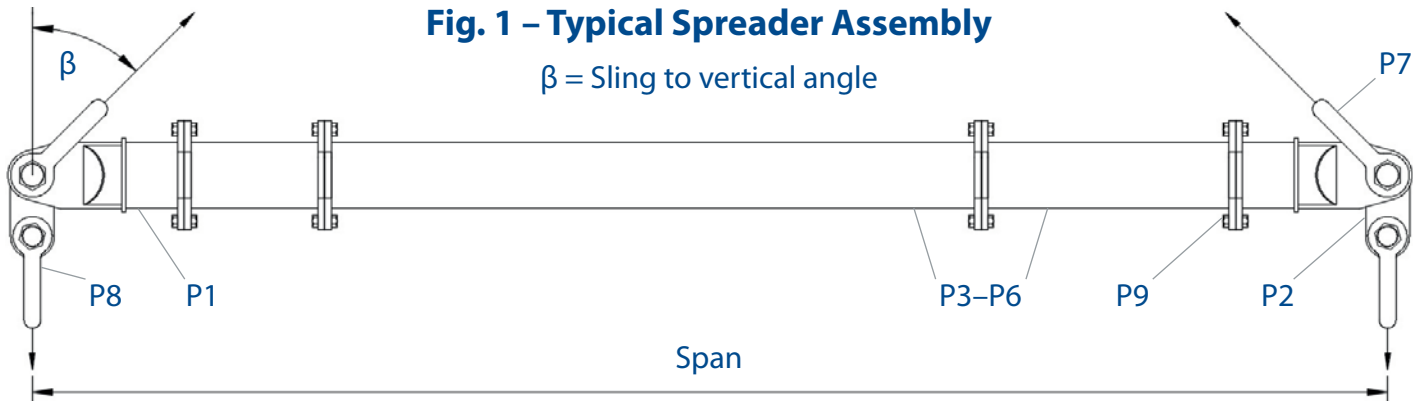


# User Instructions

## MOD 110H

**Modulift**<sup>®</sup>  
working between the hook and the load

The Modulift Spreader is modular in length, and every spreader consists of 1 pair of End Units and Drop Links, with intermediate struts that can be bolted into the assembly to achieve different spans. MOD 110H has an assembled span ranging from 2 metres to 18 metres in 0.5 metre increments.



**Table 1 – Component List**

Part Ref.	Description	Weight/item
P1	End Unit	178kg
P2	Drop Link	55kg
P3	4.0m Strut	367kg
P4	2.0m Strut	212kg
P5	1.0m Strut	134kg
P6	0.5m Strut	96kg
P7	120t Shackle	110kg
P8	85t Shackle	62kg
P9	M20 x 65 Grade 8.8 HT Bolts, Nuts & Washers	

### MOD 110H Beam Specification

- Rated at 170 tonnes SWL at 11.5 metres span (30° STV). See Load Table for SWL at longer spans.
- 'Sling to Vertical' angle,  $\beta$ , 45 degrees or less.
- End Units & Drop Links are rated at 85 tonnes WLL each (170 tonnes combined capacity).
- **Bolt tightening torque: 150Nm.** Spanner size required: 30mm.
- Recommended additional equipment: Torque Wrench, Podger Spanner and Ring Spanner.

### **WARNING!**

- Personnel using this system should be suitably trained, competent and have a clear understanding of Safe Slings procedures.
- The use of Modulift equipment must be in accordance with the procedures laid down in 'Lifting Operations and Lifting Equipment Regulations 1998' (LOLER).
- **Never exceed stated SWL** – Adhere to SWL in **Table 2** for particular sling angle used.
- **The top sling length is critical to the safe use of the spreader** – Adhere to **Table 2**.
- Ensure Drop Links hang down, and smaller shackles are connected to bottom hole of Drop Link.
- Do not under any circumstances hang load(s) from the tube or flanges – the spreader is designed for axial compression, not bending.

# User Instructions MOD 110H

## Assembly Procedure

- Check the ID plates on each Modulift component to ensure the correct size is used.
- Lay out the Struts and End Units in the correct configuration (see **Table 2**), laid on flats to prevent rolling.
- Check that all pairs of flanges are clear from debris, sand etc. before connection.
- Bolt the components together using bolts, nuts & washers provided. Tighten the bolts to a torque as shown overleaf, 6 bolts per connection. The number and grade of bolts is critical for the safe use of the spreader particularly at longer spans.
- Place drop link inside the jaw of an end unit, with the larger hole of drop link lined up with the End Unit hole.
- Place a top sling onto the body of a top shackle, and put jaw of top shackle over the end unit jaw.
- Put top shackle pin through shackle, end unit jaw and drop link, and repeat for other spreader beam end.
- Attach free ends of top slings to crane hook.
- Attach lower slings and shackles to lower holes of drop links, and attach them to the load to be lifted.
- The assembled spreader beam and lifting rig must be thoroughly checked by a competent person prior to lifting.

## Do's & Don'ts

- Do ensure to load the spreader through the drop links only. i.e. adhere to **Fig. 1**.
- Do keep the loaded spreader clear of obstacles – any contact could cause beam failure.
- Do ensure correct use of appropriate top slings, do not twist any slings unnecessarily.
- Do not hang any load from the spreader tube or flanges.
- Do not exceed stated SWL for that particular span – adhere to **Table 2**.
- Do not rig the lower slings more than 6 degrees from vertical.
- When moving or positioning long struts or assemblies use tag lines to control movement.
- Individual components can be heavy and extreme care must be taken if manual handling.

## Recommended top sling types:

Textile slings, wire rope slings with soft eyes and chain slings with small end fittings. If thimble eyes are used with wire rope slings, make sure sling angle is 30 degrees or less. Other types exist but not all are suitable due to end fitting size, particularly larger capacity chain hook and thimble eyes.


**Note:** Lengthening the slings can give greater clearance.  
**Refer to Modulift supplier if in doubt.**



## Table 2 – Load v Span

Span (m)	Sling To Vertical Angle (STV) β						Recommended Configuration							
	45°		30°		20°		EU - End Unit (1m)							
	SWL (t)	Min.top sling length (m)	SWL (t)	Min.top sling length (m)	SWL (t)	Min.top sling length (m)	EU	EU	EU	EU	EU	EU		
2.0	167	1.0	170	1.6	170	2.5	EU	EU						
2.5	167	1.4	170	2.1	170	3.3	EU	0.5	EU					
3.0	167	1.7	170	2.6	170	4.0	EU	1	EU					
3.5	167	2.1	170	3.1	170	4.7	EU	1	0.5	EU				
4.0	167	2.4	170	3.6	170	5.5	EU	2	EU					
4.5	167	2.8	170	4.1	170	6.2	EU	2	0.5	EU				
5.0	167	3.1	170	4.6	170	6.9	EU	2	1	EU				
5.5	167	3.5	170	5.1	170	7.6	EU	0.5	2	1	EU			
6.0	167	3.8	170	5.6	170	8.4	EU	2	2	EU				
6.5	167	4.2	170	6.1	170	9.1	EU	2	2	0.5	EU			
7.0	167	4.6	170	6.6	170	9.8	EU	2	2	1	EU			
7.5	167	4.9	170	7.1	170	10.6	EU	0.5	2	2	1	EU		
8.0	167	5.3	170	7.6	170	11.3	EU	2	2	2	EU			
8.5	158	5.6	170	8.1	170	12.0	EU	0.5	2	2	2	EU		
9.0	146	6.0	170	8.6	170	12.8	EU	2	2	2	1	EU		
9.5	134	6.3	170	9.1	170	13.5	EU	0.5	1	4	2	EU		
10.0	126	6.7	170	9.6	170	14.2	EU	4	4	EU				
10.5	116	7.0	170	10.1	170	15.0	EU	4	4	0.5	EU			
11.0	107	7.4	170	10.6	170	15.7	EU	4	4	1	EU			
11.5	98	7.7	170	11.1	170	16.4	EU	0.5	4	4	1	EU		
12.0	91	8.1	160	11.6	170	17.1	EU	2	4	4	EU			
12.5	84	8.4	147	12.1	170	17.9	EU	2	4	4	0.5	EU		
13.0	78	8.8	137	12.6	170	18.6	EU	2	4	4	1	EU		
13.5	72	9.1	126	13.1	170	19.3	EU	2	4	4	1	0.5	EU	
14.0	67	9.5	117	13.6	170	20.1	EU	4	4	4	EU			
14.5	61	9.9	108	14.1	170	20.8	EU	0.5	4	4	4	EU		
15.0	57	10.2	100	14.6	159	21.5	EU	4	4	4	1	EU		
15.5	52	10.6	92	15.1	147	22.3	EU	0.5	4	4	4	1	EU	
16.0	48	10.9	85	15.6	137	23.0	EU	4	4	4	2	EU		
16.5	44	11.3	79	16.1	126	23.7	EU	4	4	4	2	0.5	EU	
17.0	41	11.6	73	16.6	117	24.5	EU	4	4	4	2	1	EU	
17.5	38	12.0	67	17.1	108	25.2	EU	4	4	4	2	1	0.5	EU
18.0	35	12.3	60	17.6	101	25.9	EU	4	4	4	4	EU		

## WARNING!

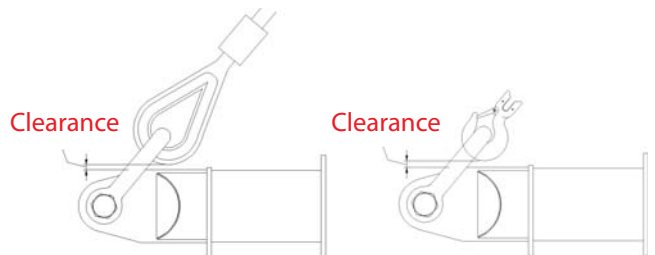

- The rigger must ensure that there is a clearance between the sling end fitting and the end unit as shown above.
- Max number of struts allowed in spreader assembly: 6.
- Assemble longer struts in the centre of the spreader configuration.
- Sling angle is crucial to safe use of spreader.