

USER INSTRUCTIONS

MOD 400/700

Modulift[®]
working between the hook and the load

The Modulift Spreader is modular in length. Every spreader consists of 1 pair of End Units & Drop Links, with intermediate struts that can be bolted into the assembly to achieve different spans. The MOD 400/700 has an assembled span ranging from 2 metres to 23m in 0.5m increments.



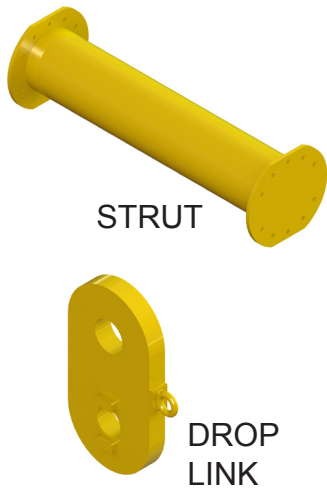


TABLE 1: COMPONENT LIST		
PART REF:	DESCRIPTION	WEIGHT / ITEM
P1	END UNIT WLL 350t	610kg
P2	DROP LINK WLL 350t	155kg
P3	6.0m STRUT	1365kg
P4	3.0m STRUT	785kg
P5	2.0m STRUT	590kg
P6	1.0m STRUT	395kg
P7	0.5m STRUT	286kg
P8	400t WIDE BODY SHACKLE	580kg
P9	400t WIDE BODY SHACKLE	580kg
P10	M24x90 Grade 8.8 HT BOLTS, NUTS & WASHERS	

END UNIT
SUB-ASSY

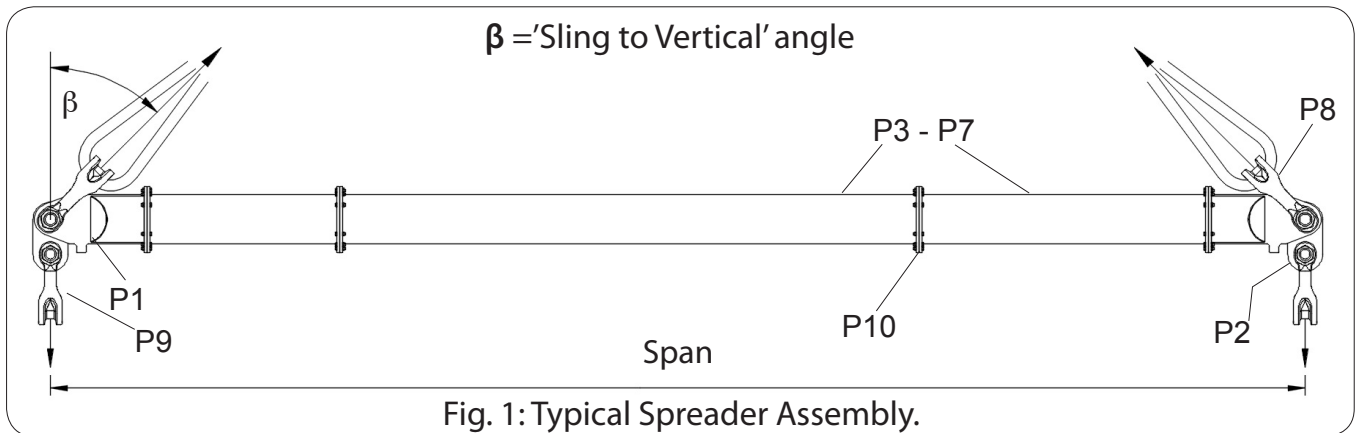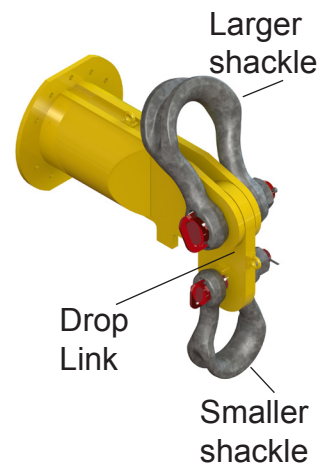

MOD 400/700 - Beam Specification.

- Rated at 700 tonnes SWL at 8 metres span (30° STV). See Load Table for SWL at longer spans.
- 'Sling to Vertical' angle, β , 45 degrees or less.
- End Units & Drop Links are rated at 350 tonnes WLL each (700 tonnes combined capacity).
- **Bolt tightening torque: 250Nm.** Spanner size required: 36mm.
- Recommended additional equipment: Torque Wrench, Podger Spanner and Ring Spanner.



WARNING!

- Personnel using this system should be suitably trained, competent and have a clear understanding of Safe Slings procedures.
- The use of Modulift equipment must be in accordance with the procedures laid down in 'Lifting Operations and Lifting Equipment Regulations 1998' (LOLER).
- NEVER EXCEED STATED SWL - ADHERE TO SWL IN TABLE 2, FOR PARTICULAR SLING ANGLE USED
- THE TOP SLING LENGTH IS CRITICAL TO THE SAFE USE OF THE SPREADER - ADHERE TO TABLE 2.
- Ensure Drop Links hang down, and smaller shackles are connected to bottom hole of Drop Link.
- Do not under any circumstances hang load(s) from the tube or flanges - the spreader is designed for axial compression - not bending.

MODULIFT UK LTD ·

t.+44(0)1202 621511 e. sales@modulift.com www.modulift.com

USER INSTRUCTIONS

MOD 400/700


Modulift®

working between the hook and the load

TABLE 2: Load v Span.

45° STV			Recommended Configuration						30° STV		
Span /m	SWL /t	Min Top sling Length /m	EU - End Unit (1m) STV = °SLING TO VERTICAL ANGLE, β						Span /m	SWL /t	Min Top sling Length /m
			EU	EU							
2	460	1.5	EU	EU					2	700	2
3	456	2.5	EU	1	EU				3	700	3
4	450	3.0	EU	2	EU				4	700	4
5	442	3.5	EU	3	EU				5	700	5
6	434	4.5	EU	3	1	EU			6	700	6
7	424	5.0	EU	3	2	EU			7	700	7
8	413	6.0	EU	6	EU				8	700	8
9	400	6.5	EU	6	1	EU			9	692	9
10	384	7.0	EU	6	2	EU			10	655	10
11	365	8.0	EU	6	3	EU			11	633	11
12	350	8.5	EU	3	6	1	EU		12	605	12
13	327	9.5	EU	3	6	2	EU		13	566	13
14	303	10.0	EU	6	6	EU			14	524	14
15	278	11.0	EU	6	6	1	EU		15	481	15
16	250	11.5	EU	6	6	2	EU		16	433	16
17	227	12.0	EU	6	6	3	EU		17	393	17
18	205	13.0	EU	1	6	6	3	EU	18	355	18
19	183	13.5	EU	2	6	6	3	EU	19	317	19
20	161	14.5	EU	6	6	6	EU		20	279	20
21	145	15.0	EU	6	6	6	1	EU	21	251	21
22	133	16.0	EU	6	6	6	2	EU	22	230	22
23	116	16.5	EU	6	6	6	3	EU	23	200	23

To calculate the SWL at intermediate spans utilising the 0.5m strut, round up the span to the next longest span in Table 2, and use the stated SWL.

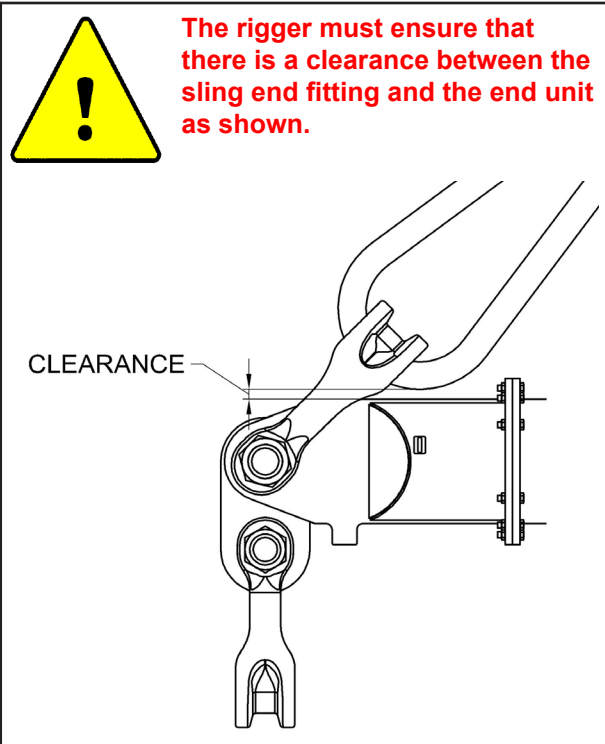

The rigger must ensure that there is a clearance between the sling end fitting and the end unit as shown.

• Max number of struts allowed in spreader assembly: 5
• Assemble longer struts in the centre of the spreader configuration
• Sling angle is crucial to safe use of spreader

Recommended top sling types: Textile slings, wire rope slings with soft eyes and chain slings with small end fittings. If thimble eyes are used with wire rope slings, make sure sling angle is 30 degrees or less. Other types exist but not all are suitable due to end fitting size, particularly larger capacity chain hook and thimble eyes. Note: Lengthening the slings can give greater clearance. **Refer to Modulift supplier if in doubt.**

ASSEMBLY PROCEDURE.


1. Check the ID plates on each Modulift component to ensure the correct size is used.
2. Lay out the Struts and End Units in the correct configuration (see table 2), laid on flats to prevent rolling.
3. Check that all pairs of flanges are clear from debris, sand etc. before connection.
4. Bolt the components together using bolts, nuts & washers provided. Tighten the bolts to a torque as shown overleaf, 10 bolts per connection*.
5. Place drop link inside the jaw of an end unit, with the larger hole of drop link lined up with the End Unit hole.
6. Place a top sling onto the body of a top shackle, and put jaw of top shackle over the end unit jaw.
7. Put top shackle pin through shackle, end unit jaw and drop link, and repeat for other spreader beam end.
8. Attach free ends of top slings to crane hook.
9. Attach lower slings and shackles to lower holes of drop links, and attach them to the load to be lifted.
10. **The assembled spreader beam and lifting rig must be thoroughly checked by a competent person prior to lifting.**

DO's & DON'TS

- Do ensure to load the spreader through the drop links only. i.e. adhere to Fig. 1.
- Do keep the loaded spreader clear of obstacles - any contact could cause beam failure.
- Do ensure correct use of appropriate top slings, do not twist any slings unnecessarily.
- Do not hang any load from the spreader tube or flanges.
- Do not exceed stated SWL for that particular span - adhere to table 2.
- Do not rig the lower slings more than 6 degrees from vertical.
- When moving or positioning long struts or assemblies use tag lines to control movement.
- Individual components can be heavy and extreme care must be taken if manual handling.



Should you find your equipment is no longer of use, please dispose of in a responsible manner. Please contact Modulift if you need further guidance.



*The number and grade of bolts is critical for the safe use of the spreader particularly at longer spans